


assembly instructions

RC040 - cube ReFrame®

afi
BRANDING

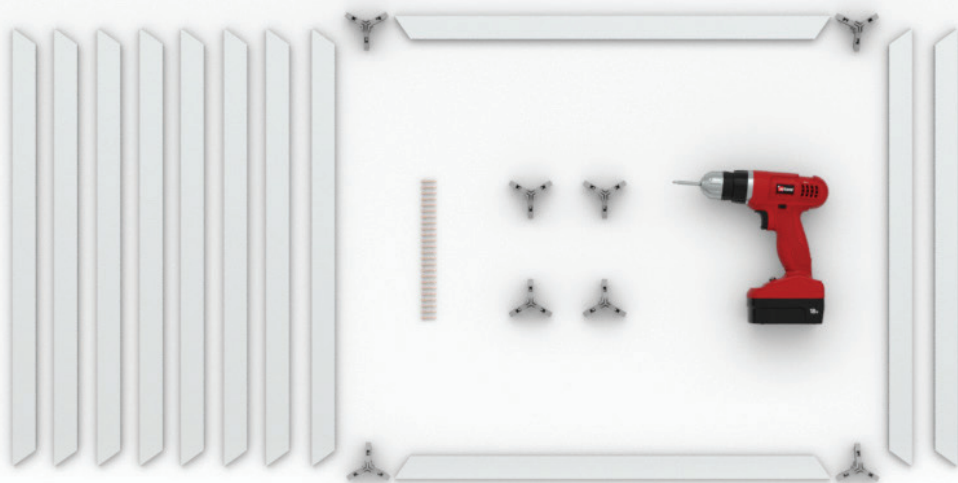

scan for
assembly
video





1

Lay out the ReFrame® components on a flat surface and ensure you have everything required before you start the assembly.


CHECKLIST

8x	Corner Brackets
12x	ReFrame® Lengths
24x	Screws
1x	Drill


2 Insert corner bracket into frame length (ensuring the bracket is set in as far as possible)

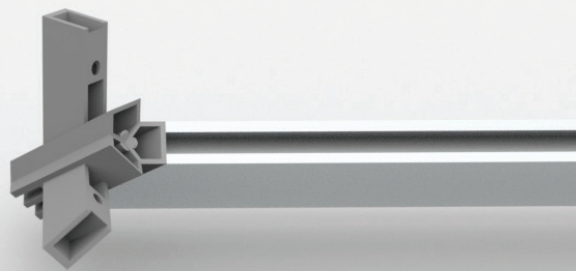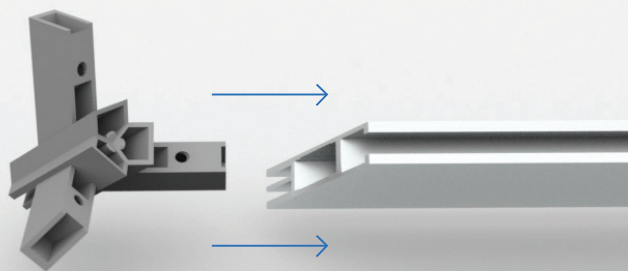

3 Repeat step 2 on the remaining 3 corners of the bottom frame lengths

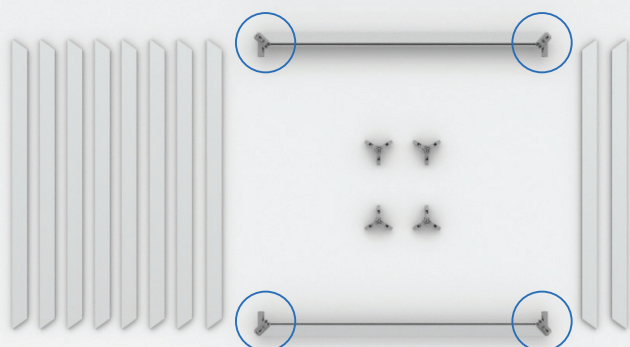

4 Bridge the two parallel bottom frame lengths to make a square base

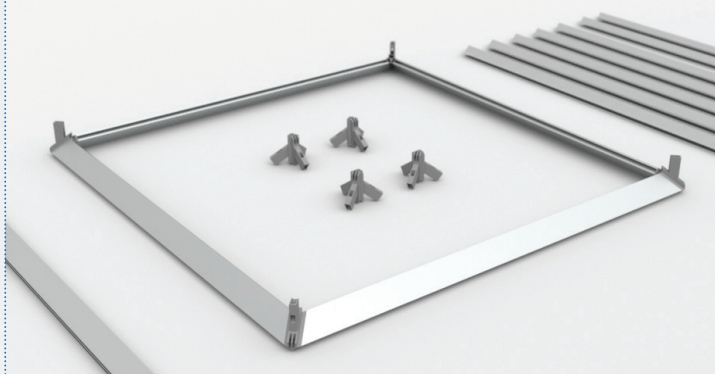


assembly instructions


afi
BRANDING

RC040 - cube ReFrame®


5 Connect frames to vertical corner brackets

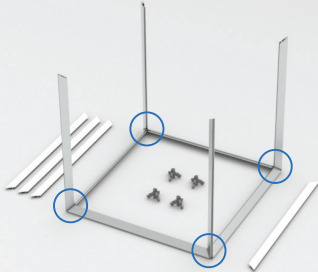


6 Repeat step 2, 3 and 4 to make the top frame

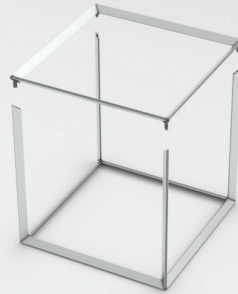

7 Connect top frame to vertical lengths

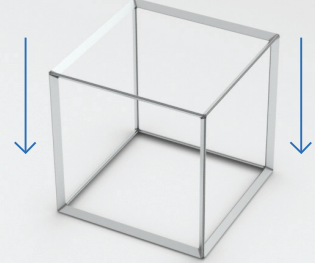


8 Measure and mark 15mm from inside bracket edge along frame

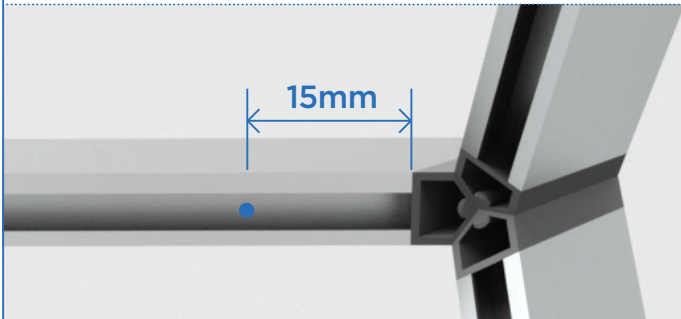


9 Fix the corner brackets using a power drill and the screws provided



10 Repeat step 7 and 8 on remaining 2 bracket corners

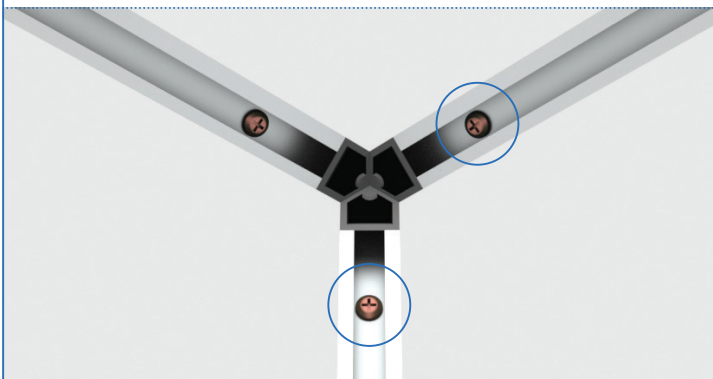

11 Repeat step 8, 9 and 10 on all remaining corners to complete frame

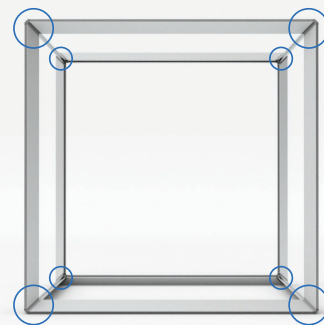

12 Applying your custom ReFrame® fabric skin

Now that you've finished assembling your ReFrame®, it's time to apply your custom ReFrame® fabric skin. Please refer to either a printed 'ReFrame® Fabric Installation Guide' or go to www.reframe.com.au to watch one of our instructional assembly videos to see how to correctly apply your ReFrame® fabric skin.

NOTE: The assembly instructions for the RC040 (and included components) illustrate the fundamental steps to assemble a 'standard' Cube type ReFrame®. If your ReFrame® is oversize, has additional components such as joiners (not shown on this fact sheet), accessories, or has bends/curves and you are unsure how to proceed with assembly, please contact the team at AFI Branding on 1300 652 514 and we will guide you through the assembly process.



Developed by AFI Branding