

assembly instructions

RC051 - double-sided cube ReFrame®



1

Lay out the ReFrame® components on a flat surface and ensure you have everything required before you start the assembly.

CHECKLIST

12x ReFrame® Lengths


24x Brackets

1x Allen Key


scan for
assembly
video




2 Insert corner bracket into frame length (ensuring the bracket is set in as far as possible)

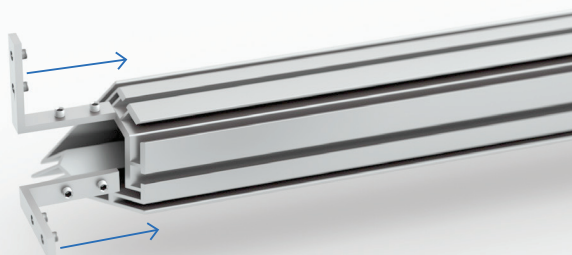

3 Repeat step 2 on the remaining 3 corners of the bottom frame lengths

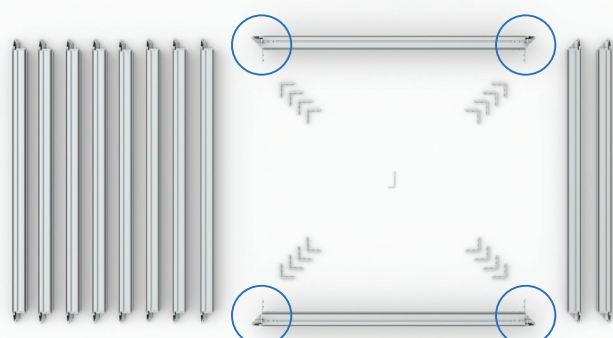

4 Bridge the two parallel bottom frame lengths to make a square base

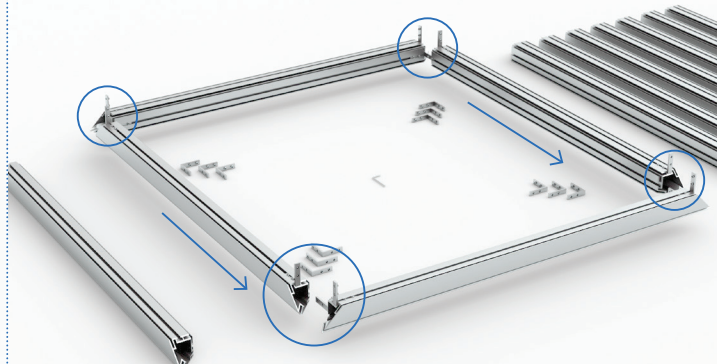


assembly instructions


afi
BRANDING

RC051 - double-sided cube ReFrame®


- 5** Ensure each corner is fixed with 2 vertical facing brackets

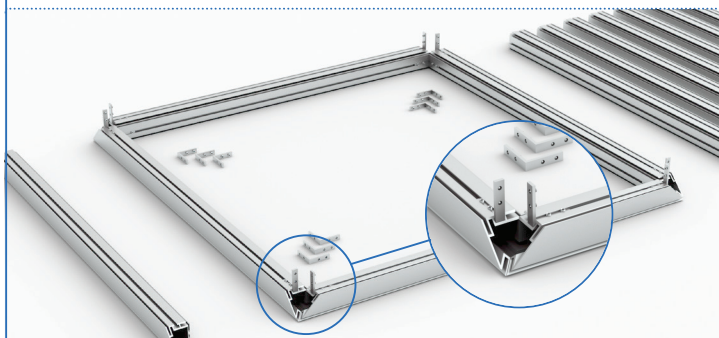


- 6** Lower vertical lengths onto vertical facing brackets

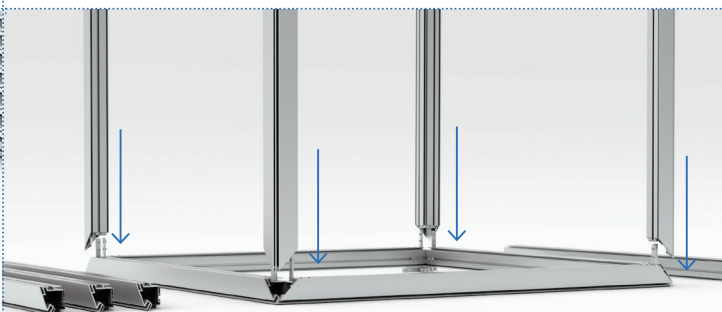


- 7** Ensure vertical frames are correctly in place

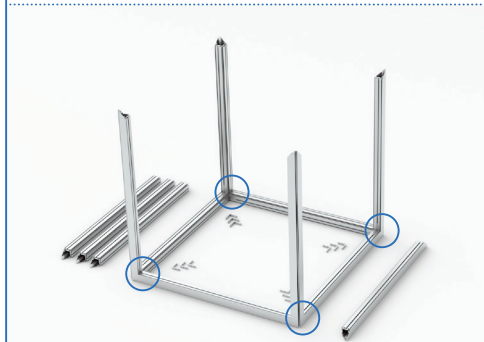

- 8** Repeat step 2, 3 and 4 to make the top frame

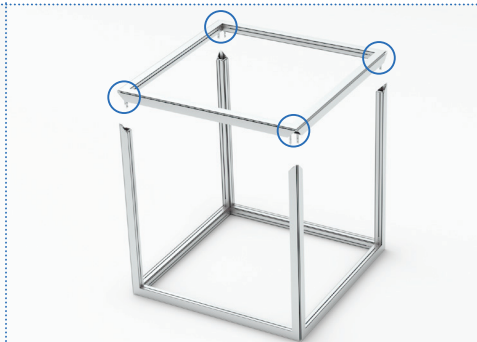


- 9** Connect top frame to vertical lengths

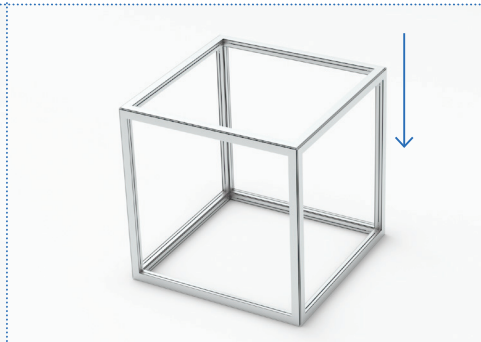

- 10** Using the provided allen key, fix the corner brackets



- 11** Repeat step 8 on all remaining brackets to complete frame

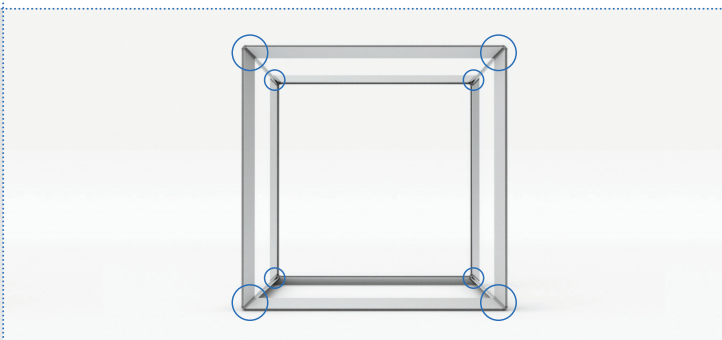

- 12** Applying your custom ReFrame® fabric skin

Now that you've finished assembling your ReFrame®, it's time to apply your custom ReFrame® fabric skin. Please refer to either a printed 'ReFrame® Fabric Installation Guide' or go to www.reframe.com.au to watch one of our instructional assembly videos to see how to correctly apply your ReFrame® fabric skin.

NOTE: The assembly instructions for the RC051 (and included components) illustrate the fundamental steps to assemble a 'standard' Double-Sided Cube type ReFrame®. If your ReFrame® is oversize, has additional components such as joiners (not shown on this fact sheet), accessories, or has bends/curves and you are unsure how to proceed with assembly, please contact the team at AFI Branding on 1300 652 514 and we will guide you through the assembly process.



Developed by AFI Branding